



124 SERIES WIRING DIAGRAM BALLAST BOX

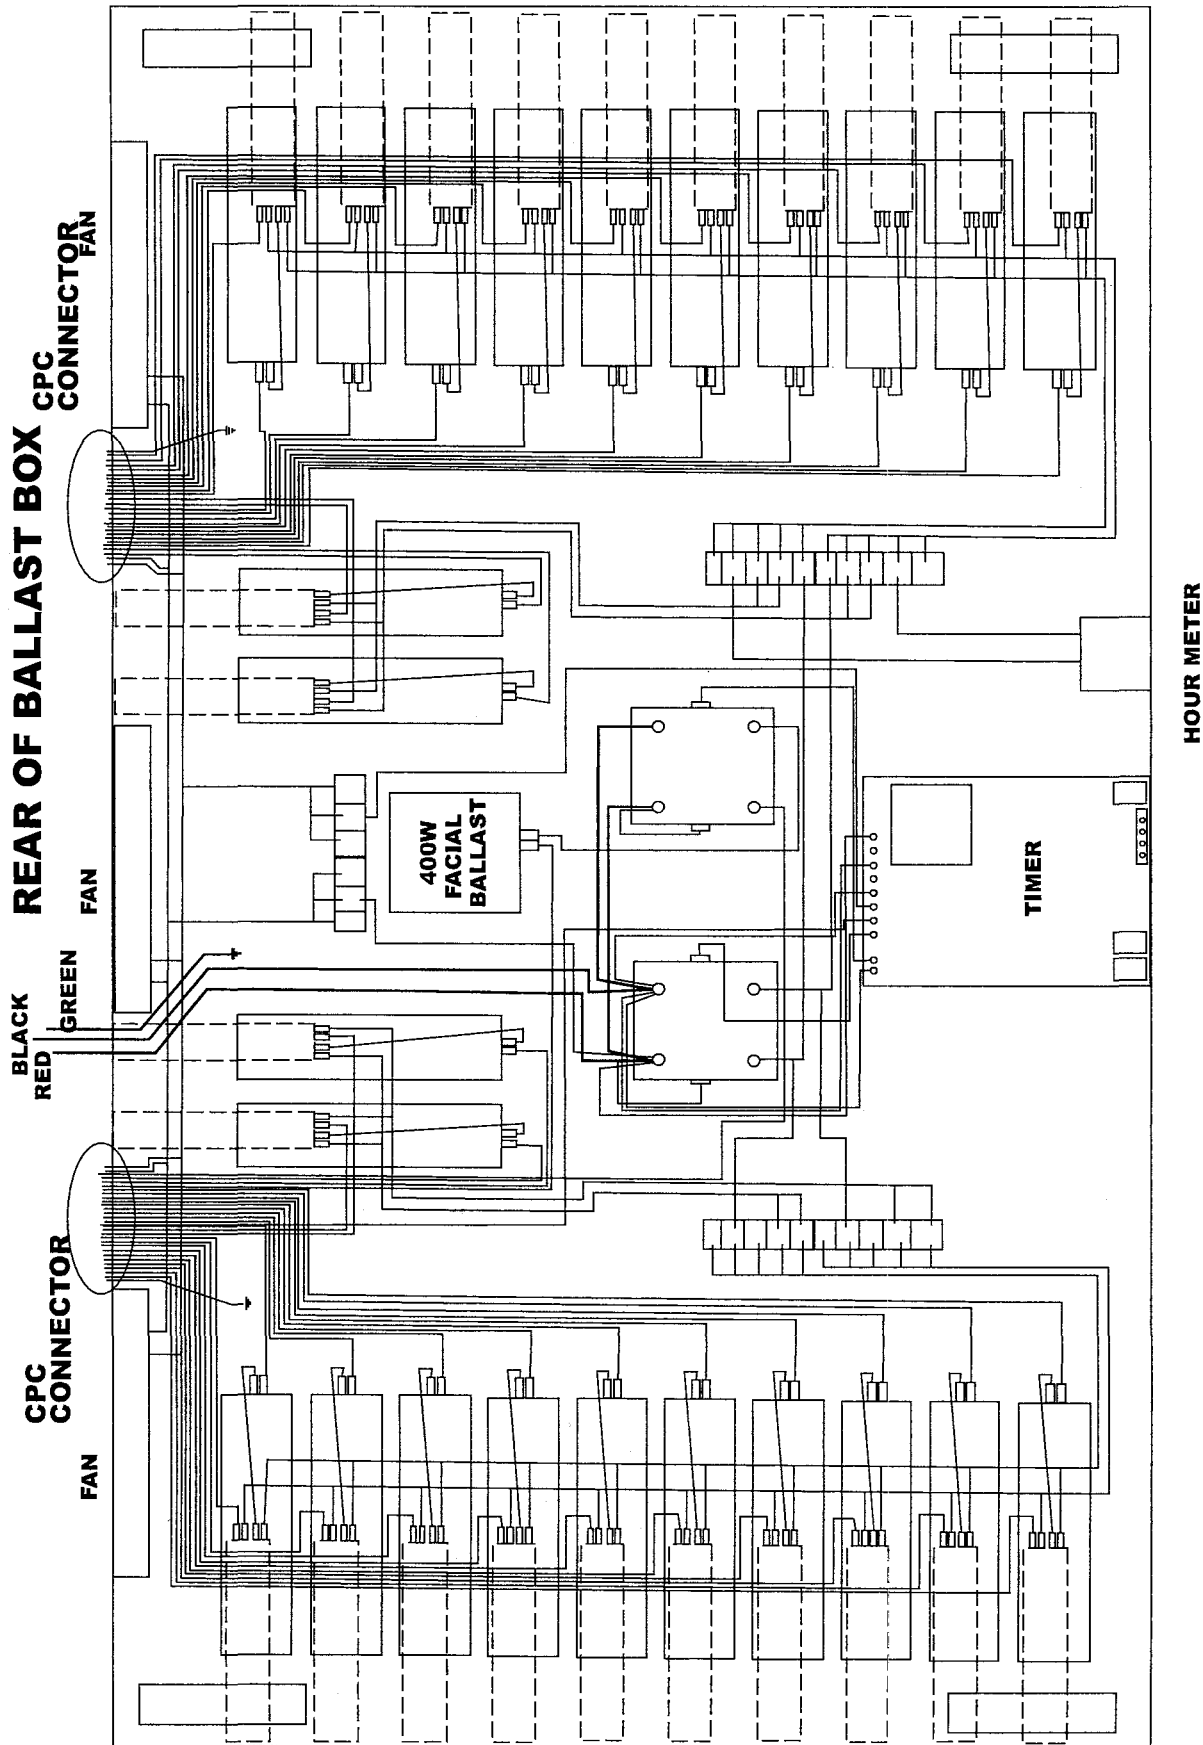

124 SERIES WIRING DIAGRAM BALLAST BOX

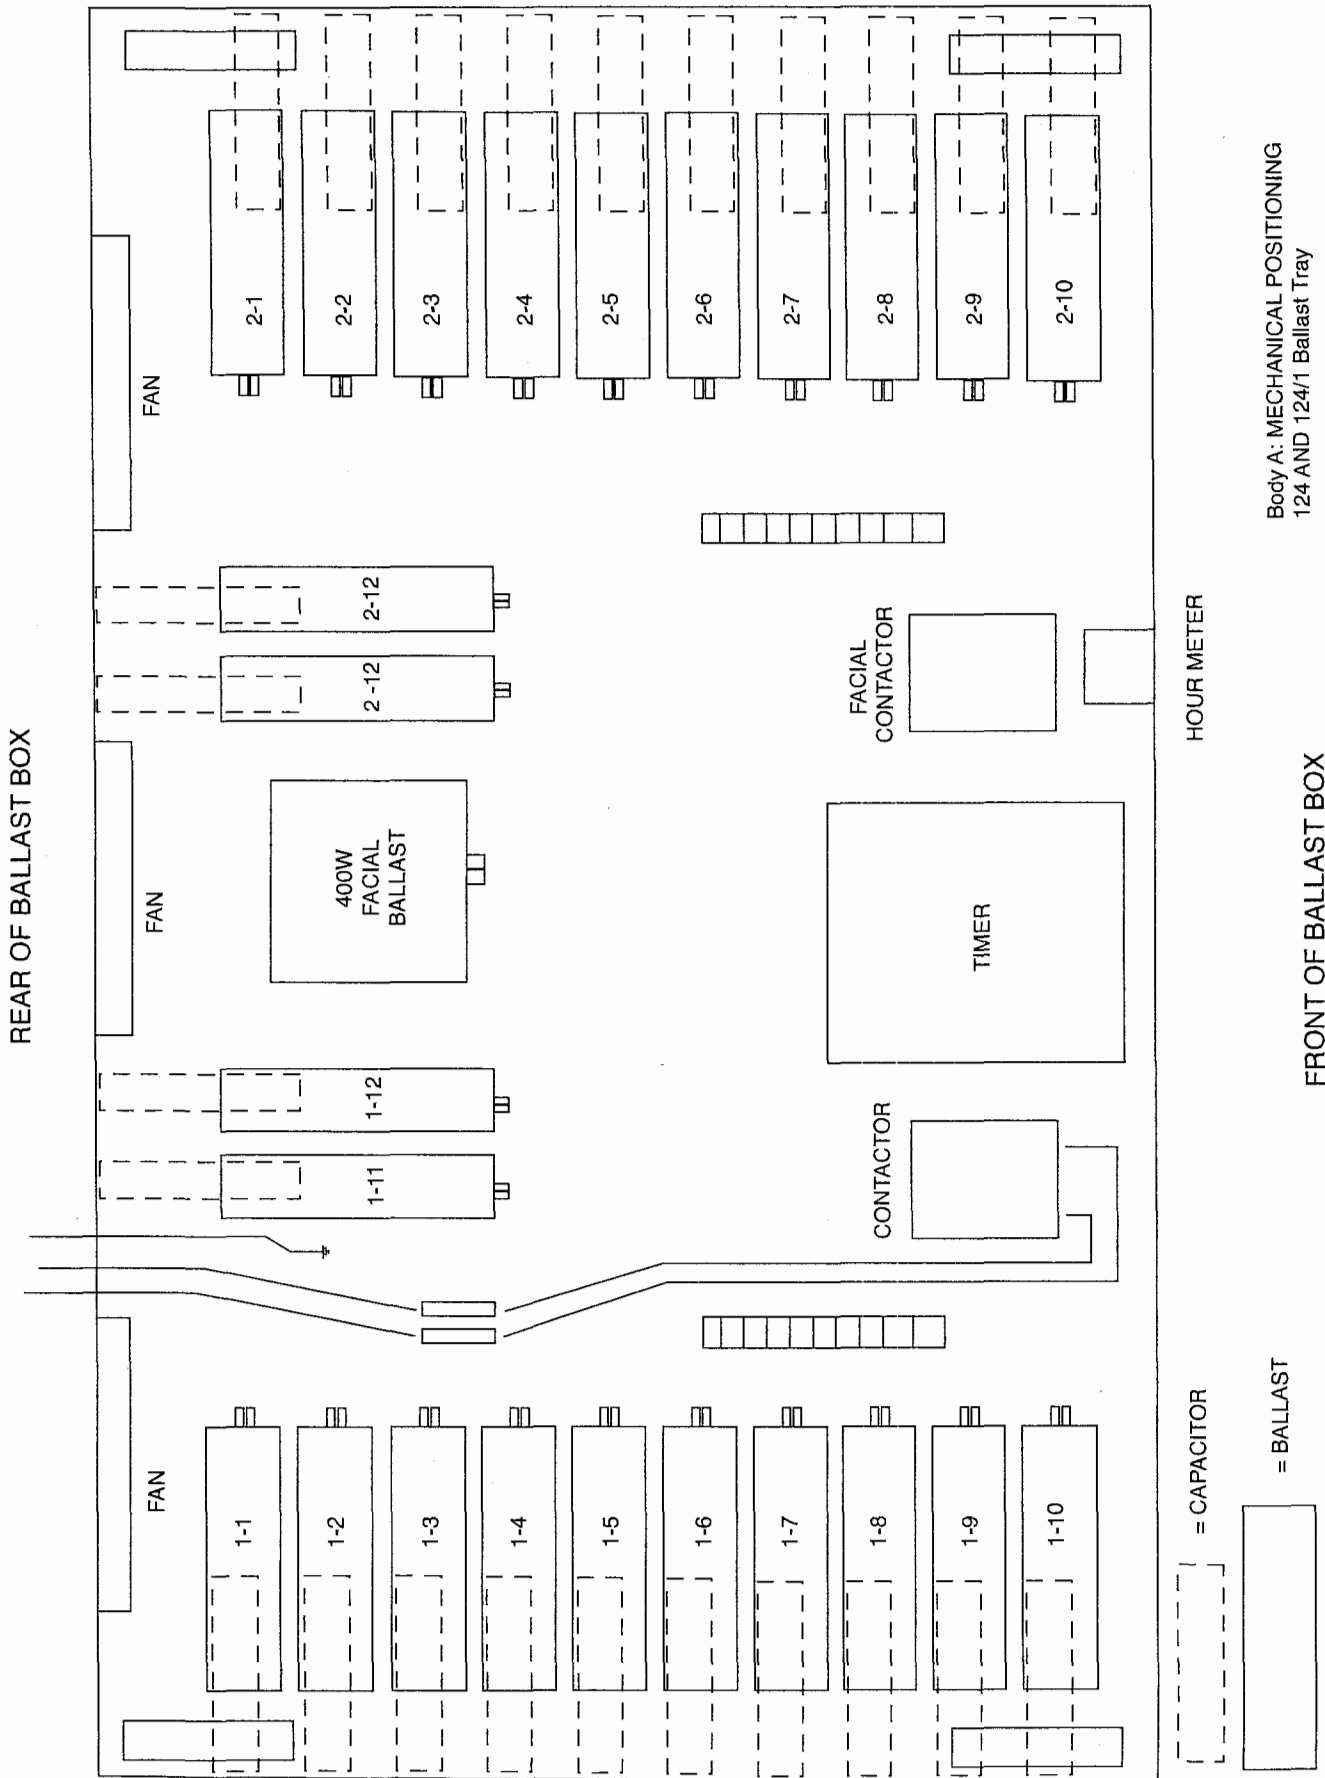

Body A: MECHANICAL POSITIONING
124 AND 124/1 Ballast Tray

FRONT OF BALLAST BOX

HOUR METER

= CAPACITOR

= BALLAST

124 SERIES BALLAST BOX

